

# Image View (F3)

Image View is a normal-looking, black-and-white image of the camera's view.

Image View can be useful to identify an object blocking the laser or where stray light is entering the camera's view. If the image is too light or dark, adjust the [AverageIntensity](#).

The image exposure time is displayed in the upper left corner of the display.

Use the Scanner drop-down box to select which connected scanner to examine. If the selected scanner has more than one laser, use the Laser drop-down box to select which laser to examine. Laser 0 is the laser farthest from the camera.

The yellow outline is the area that is contained within the scanner's [Scan Window](#). Only data within the scan window is analyzed to adjust the exposure time when actively scanning.

**Tip:** Clicking on the image will rotate it.

## Sample Image

