

Orientation Parameters

This parameter describes the scanner's physical orientation compared to the direction the conveyor belt travels. Set true if the laser end of the scanner is upstream and false if it is downstream.

LaserUpstream

Value Range:	true or false
Default Value:	true
Location:	inside a ScannerConfig block

For more information, see [Coordinate Systems](#).